


ATTN: KRISTIAN

INSTALLATION INSTRUCTIONS FOR
P/N 6020 2" BROKEN CABLE BRACKETS
P/N 6021 3" BROKEN CABLE BRACKETS

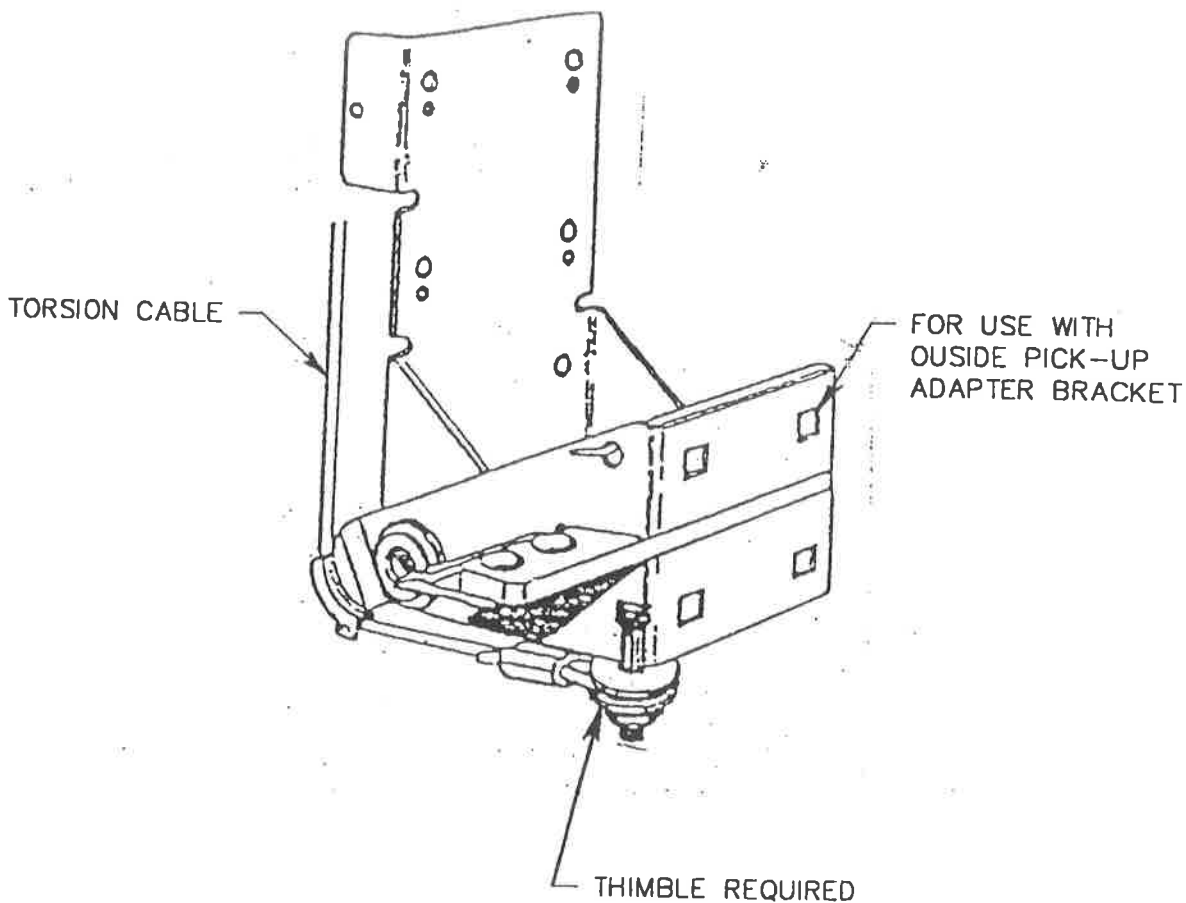

NOTES:

1. IT IS RECOMMENDED THAT THE 2" BRACKETS BE USED ON DOORS THAT HAVE OVER 70 LBS OPEN DOOR WEIGHT, AND THE 3" BRACKETS BE USED ON DOORS THAT HAVE OVER 100 LBS OPEN DOOR WEIGHT.
2. FOR 2" BROKEN CABLE BOTTOM BRACKET (2" TRACK) ADD 4" TO TORSION CABLE LENGTHS.
FOR 3" BROKEN CABLE BOTTOM BRACKET (3" TRACK) ADD 5" TO TORSION CABLE LENGTHS.