



## Supplemental Instructions for Triple End Style/ Heavy Duty Hardware

- The Triple end style hardware will go on the same as normal hardware except with these differences.
- Install the cable to the bottom bracket base using clevis pin and keys, (if a single shaft door always use the lowest hole in the bottom bracket base to install the cable.)
- Install the bottom bracket base to the door using 6- 1/4" x 3/4" self drilling red teks.
- Install the removable roller carrier to the bottom bracket base and door using 6-1/4" x 3/4" self drilling red teks and insert your 5/8" stem roller.
- If the door is 8 sections tall or taller the hardware will come "double staged" meaning the hinges will be (3-3-4-4-5-5-6-6-7-7 and so on.)

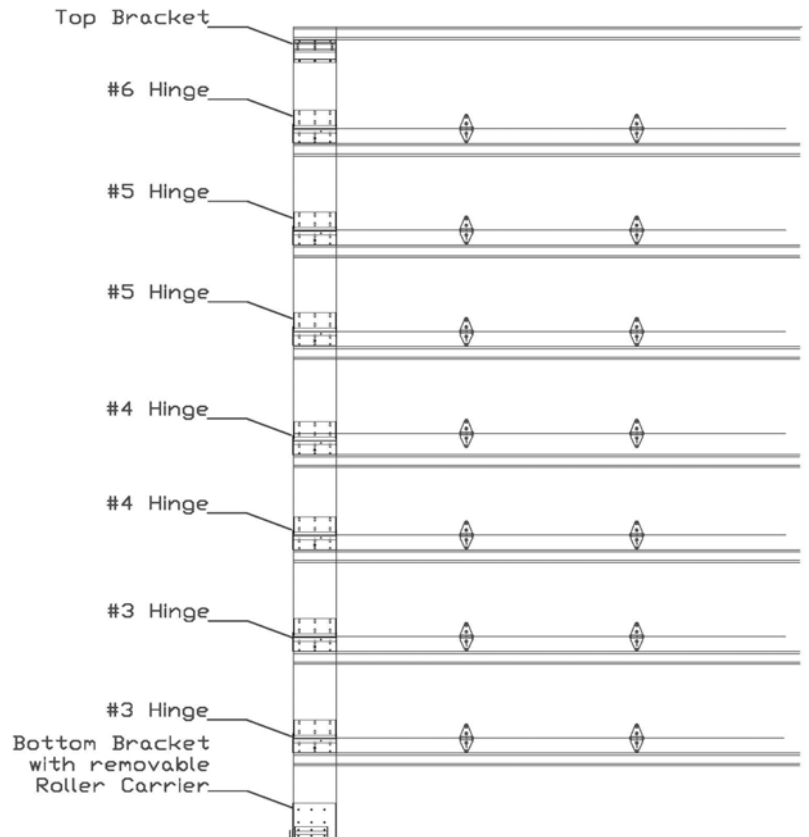

**This example is for a TAS-III with 3" track (8 sections) 16' tall. All 3" doors with 8 sections or more will Be double staged. (3-3-4-4-5-5-6 ex.)**

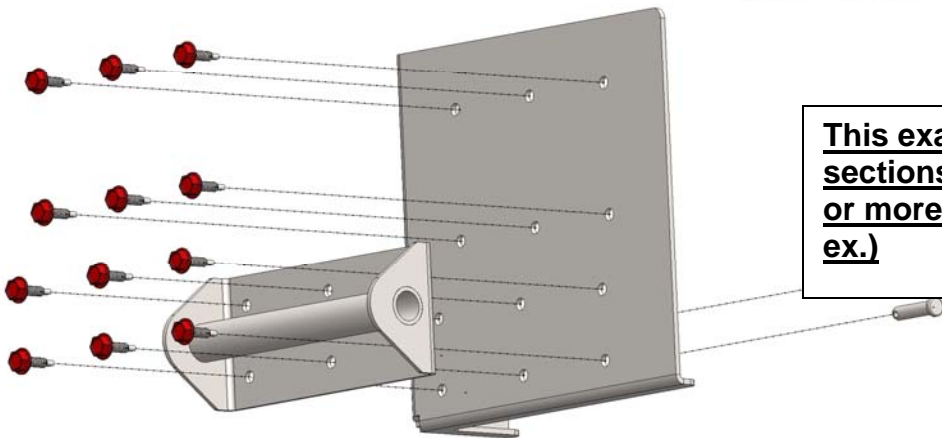

Bottom Bracket with removable Roller Carrier